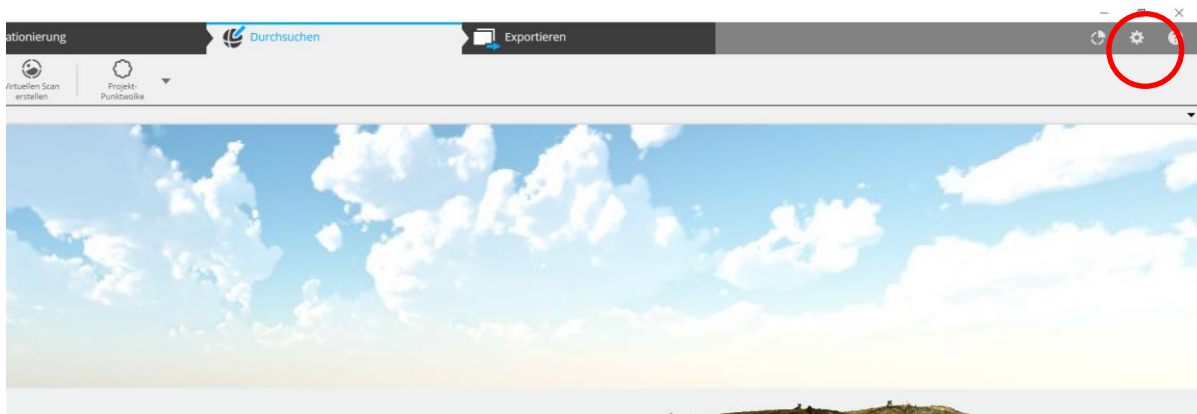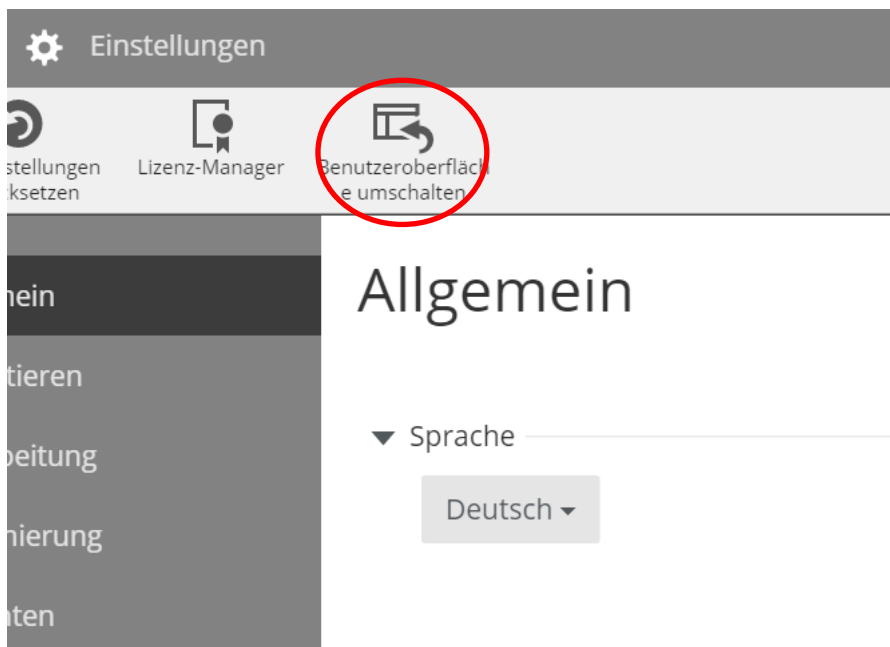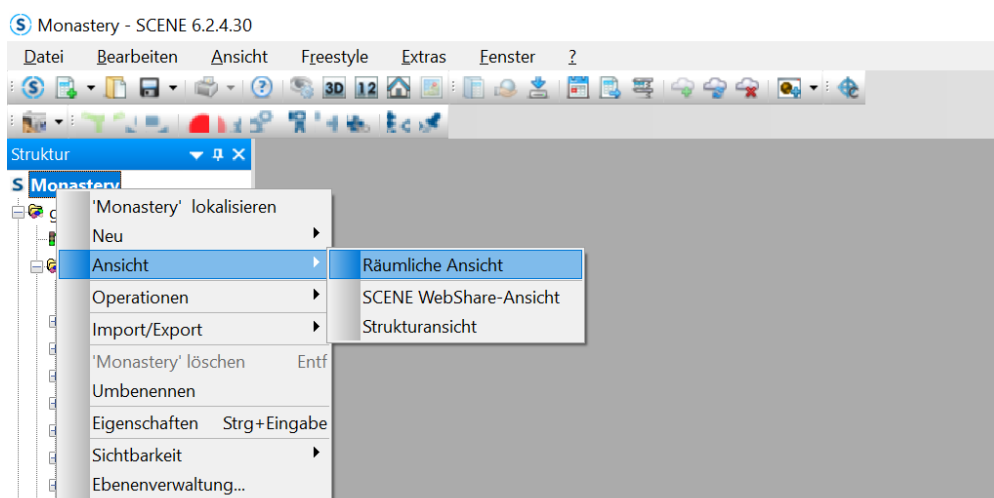1.) Start SCENE
2.) Go tot he Settings Tab
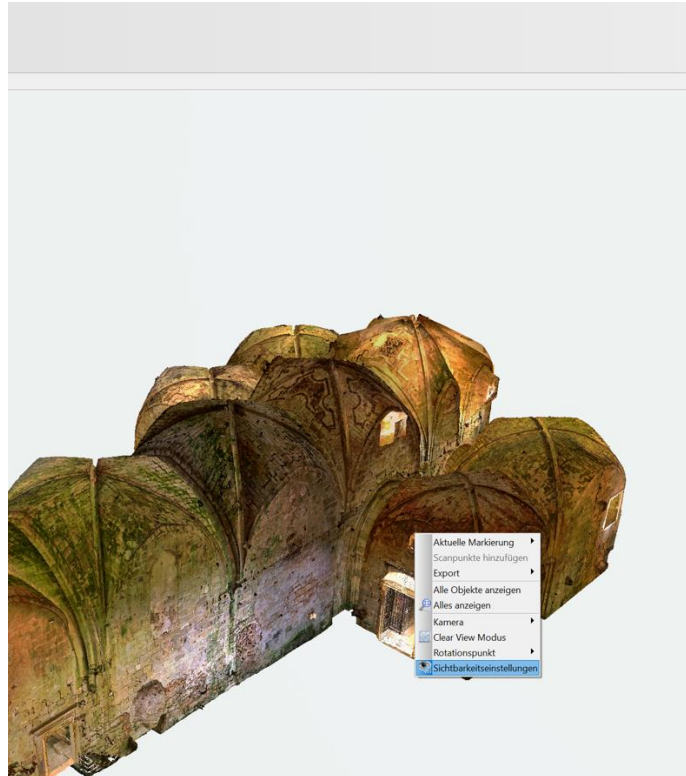

3.) In the settings tab choose „Switch User Interface"
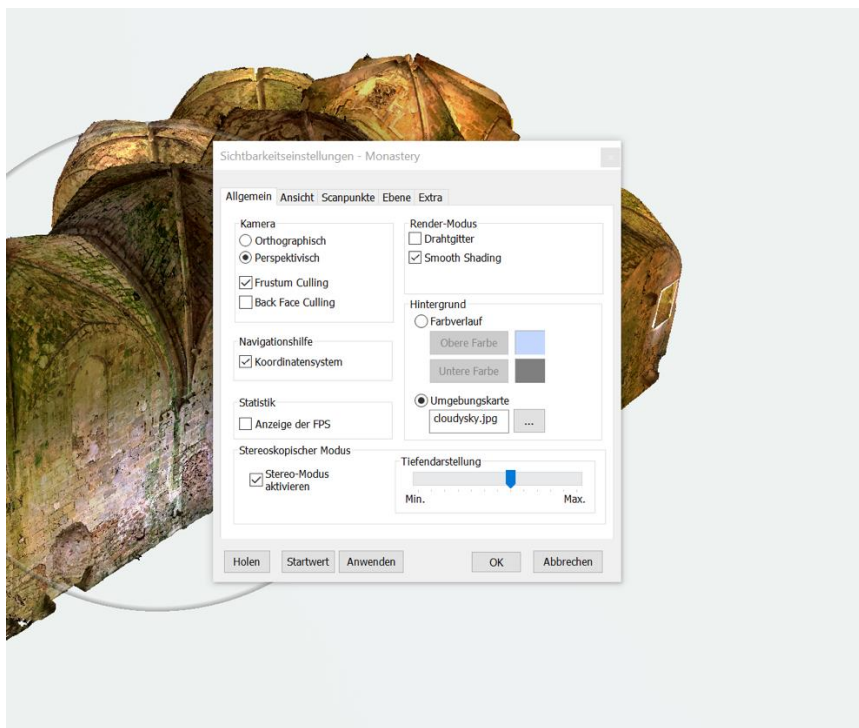

4.) The old user interface will show up

5.) Click on the Top cluster with a right mouse-click. Choose View and then Spacial View

6.) Now you can see the 3D view

7.) Click with the right mouse-button in the view and select Visibility Settings

8.) Click on **activate** Stereo Mode